

Parameter setting of ice cream machine

Parameters are divided into user parameters and plant parameters.

User parameters: long press the set button or stop button to enter the user parameters.

Factory parameters: Long press the set button and stop button at the same time to enter the factory parameters.

Parameter code	Parameter type	definition	note	Parameter setting
	User parameters	Ice cream hardness	Normal display, press harder or softer button. Adjustable range: 01-15	02
n00	User parameters	Pre cooling temperature	Pre cooling is enabled, the temperature of the pre cooling can be adjusted between 4 and 10.	04
n01	User parameters	Clear number	Press harder and softer button 6 seconds at the same time can cleaning up ice cream number,	
n02	User parameters	The time interval of auto restart cooling	Adjustable range: 3-40minute	5
n03	User parameters	The time interval of auto restart freshing	Feature enable,adjustable range: 30-120minute	
n04	User parameters	The time interval of auto restart Pre cooling	Feature enable,adjustable range: 1-30minute	5
F00	Factory parameters	Low voltage protection	Adjustable range: 180-220V	190
F01	Factory parameters	Motor type	37:370W 55:550W 75:750W 110:1100W	According to motor power
F02	Factory parameters	Pre cooling setting	0: No pre cooling 1: Single compressor 2: Double compressor	According to pre cooling function
F03	Factory parameters	Refrigerating switch for refrigerating cylinder	ON: open the preservation function OFF: close the preservation function	OFF
F04	Factory parameters	Current coefficient	Adjustable range: 80-120	100
F05	Factory parameters	Counter function	ON: open count function OFF: turn off counting function	ON
F06	Factory parameters	Air pump action delay	Adjustable range: 3-30s	10
F07	Factory parameters	Clear counting function	ON: available to clear the count OFF:disavailable to clear the count	ON
F08	Factory parameters	ion time of pressure balancing solenoid valve	Adjustable range: 1-60s	5
F09	Factory parameters	Air pump start mode	ON: press wash or produce key to start OFF: start when the ice cream discharge	ON

Warning: This parameter only applies to FSAST_GL002_03D intelligent display,all parameters of the ice cream machine have been adjusted well, the user can not change the parameters unless communicate with manufacturers.